

GB

PROGRAMME CHART




A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication

C. "Water tap closed" indication

D. "Clean pump" indication

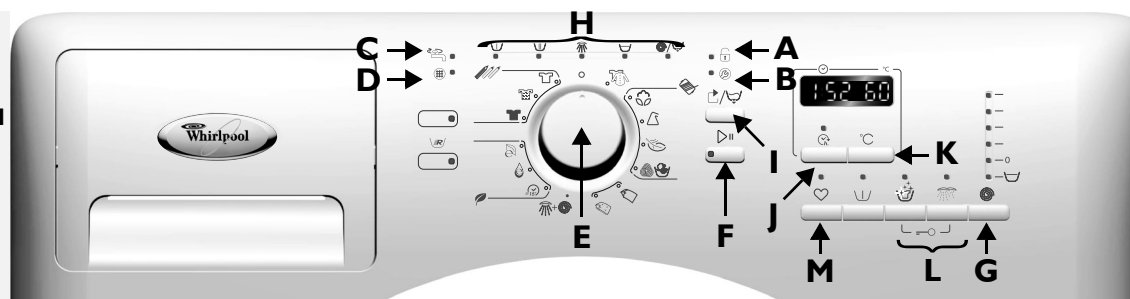

E. Programme selector

F. "Start (Pause)" button

G. "Spin speed" button (with "Rinse hold")

H. Programme sequence indication

I. "Reset/Drain" button

J. "Start delay" button

K. "Temperature" button

L. Child lock button combination

M. "Favourites" button

Programme			Temperature °C	Care Labels	Max. Load kg	Type of wash/Notes - Respect the manufacturer's recommendations on the care label	Detergents and additives			Selectable options				Start delay	Spin	
							Prewash	Main wash	Softener	Colours 15°	Rapid	Prewash	Clean +	Intensive rinse		Max. Spin Speed rpm
Mixed																
	Mix Gemengde was		cold - 60 °C		6.0	Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load.	—	Yes	*	*	—	—	—	*	*	max.
Fabrics	Cotton	Coton Bonte was	cold - 95 °C		7.0	Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	max.
	Synthetics	Synthétiques Synthetisch	cold - 60 °C		3.5	Normally soiled garments made of artificial fibres (like polyester, polyacryle, viscose etc.) or their blends with cotton.	*	Yes	*	*	*	*	*	*	*	max.
	Delicates	Délicat Fijne was	cold - 40 °C		2.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	—	*	—	—	*	1000 ¹⁾
	Wool/ Handwash	Laine/Lavage main Wol/Hand was	cold - 40 °C		2.0	Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk, linen, wool and viscose marked as handwashable. This programme is tested and approved by The Woolmark Company for machine- and handwashable wool. Select spin speed according to the manufacturer's recommendations on the care label.	—	Yes	*	*	—	—	—	—	*	1000 ¹⁾
Colours	White	Blanc Wit	cold - 60 °C		7.0	Normally to heavily soiled and robust white cotton laundry. Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent.	—	Yes	*	*	—	—	*	*	*	max.
	Light colours	Couleurs claires Lichte kleuren	cold - 60 °C		5.5	White and pastel shaded garments made of delicate fabrics. Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.	*	Yes	*	*	—	*	*	—	*	1000 ¹⁾
	Dark	Couleurs foncées Donkere kleuren	cold - 60 °C		5.0	Black and dark garments made of cotton, cotton blends and polyester. Special programme to reduce colour fading and local discolouration. Prefer to use a special liquid detergent for dark garments with this programme.	*	Yes	*	*	*	*	—	*	*	1000 ¹⁾
Eco	SuperEco	Super eco	cold - 60 °C		7.0	Heavily soiled and robust laundry, made of cotton, synthetics and their blends. Economical energy consumption by prolonged washing duration - Ideal to be run overnight to profit from more favourable energy rates. Avoid noise of spinning at night by setting the spin speed to "0" and start spin programme in the morning, or by defining programme start with "Start delay" accordingly. For garments with a high share of synthetic fibres, we recommend to use a laundry net.	—	Yes	*	*	—	—	—	*	*	max.
	AquaEco	Aqua eco	cold - 40 °C		3.0	Lightly soiled laundry made of synthetic fibres, or synthetics mixed with cotton garments. Saving programme with a very low water consumption. Use liquid detergent and the lowest recommended amount for 3kg laundry. Do not use softener.	—	Yes	—	*	—	—	—	—	*	max.
	Speed 15	Rapide 15' Snel was 15'	cold - 30 °C		3.0	Briefly worn clothing made of cotton, artificial fibres and blends with cotton. Refresh programme. Use lowest recommended detergent amount.	—	Yes	*	*	—	—	—	—	*	max.
Specials	Bedlinen	Literie Bedlinnen	cold - 95 °C		3.5	White and coloured bedlinen made of cotton and synthetic fibres, or blends of both. Reduces microbes and gently cleans, also delicate bedlinen. A thorough rinse phase helps to prevent detergent and pollen residues. Prefer powder detergent for this programme.	*	Yes	*	*	—	*	—	*	*	max.
	Big Items	Extra large XXL	cold - 60 °C		3.0	Blankets made of synthetic fibres; bedcovers filled with feathers, polyester or other artificial fibres; sleeping bags, bathmats and similar items.	*	Yes	*	*	—	*	—	*	*	1000 ¹⁾
Rinse & Spin			—	—	7.0	Rinse and intensive spin programme. Same as the last rinse and the final spin in the "Cotton" programme.	—	—	*	—	—	—	—	*	*	max.

optional / Yes : dosing required
For improved garment care, spin speed is restricted in this programme.

The wool/handwash cycle of this machine has been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0702

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06554

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes) ☹	
					without "Rapid"	with "Rapid"
Mixed	40	6.0	73	0.60	1:00	—
Cotton	95	7.0	74**	2.40	2:10	—
Cotton*	60	7.0	54	0.91	4:00	2:30
Cotton*	60	3.5	41	0.85	3:00	***
Cotton	40	7.0	69	0.75	3:15	2:15
Cotton*	40	3.5	49	0.60	3:00	***
Synthetics	60	3.5	46**	0.85	1:55	1:14
Synthetics	40	3.5	42	0.50	1:40	0:59
Delicates	30	2.5	60	0.40	0:45	—
Wool/Handwash	40	2.0	45	0.60	0:40	—
White	40	7.0	69	0.85	2:20	—
Light colours	40	5.5	70	0.50	1:20	—
Dark	40	5.0	45	0.60	1:40	1:15
SuperEco	60	7.0	69	0.84	4:00	—
AquaEco	40	3.0	19	0.45	1:00	—
Speed 15	30	3.0	30	0.20	0:15	—
Bedlinen	60	3.5	60	1.30	2:00	—
Big Items	40	3.0	74	0.75	1:30	—

Consumption values were measured in normalized conditions, in compliance with IEC/EN 60456. In the home, they may vary depending on the individual water supply pressure and temperature, the load and the type of wash. The consumption data indicated are based on an inlet water temperature of approx. 15°C through the cold fill valve as well as the hot fill valve (if available). If your washing machine has a hot fill valve, connection of this valve to hot water supply will lower the energy consumption by reduced heating times, depending on the individual hot fill inlet water temperature. Water and energy consumptions refer to the default setting of the programmes, with temperature and load as indicated in the table; selecting any options or changing the spin speed will also change the consumption data.

- ☹ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).
- Reference programmes for Energy Label.
- To reduce the water temperature, some cold water is added at the end of the main wash cycle before the water is drained.
- Automatic adaptation of programme duration after detection of wash load.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Load your laundry, close the door properly and add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Turn the **programme selector** to the desired programme. The display shows the programme duration in hours and minutes as well as the predefined temperature. The **"Start (Pause)"** button ▷|| blinks.
2. The **temperature** can be altered by pressing the "Temperature" button.
3. The indication lamp of the predefined **spin speed** lights up. In case you want to set another spin speed, press the "Spin speed" button ☹.

SELECT ANY DESIRED OPTION

Push the button of any option desired - the respective indication lights up.

When the combination of programme and option is not possible, the light switches off automatically. Unsuitable combinations of options are deselected automatically.

"Colours 15" button ☹15°

- Saves energy used for water heating while maintaining a good wash result.
- Supports colour maintenance when washing coloured laundry.
- Recommendable for lightly soiled laundry without stains.
- Use special cold wash detergents with this option to enable a good wash result.
- Not selectable for Cotton 70 - 95°C.

"Rapid" button ☹

- Enables quicker washing by shortening the programme duration.
- Recommendable for only lightly soiled laundry.
- Not selectable for Cotton 70 - 95°C.

"Prewash" button ∩

- Adds a prewash cycle to the wash programme selected; prolongs the programme by about a quarter of an hour.
- Recommended for heavily soiled laundry (e.g. containing sand or granular dirt).
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Clean + " button ☹+

- Choose this option if you use an in-wash additive for stain removal (powder, for example "Vanish") - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer's dosing instructions.
- May prolong the programme by up to 15 minutes.
- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

"Intensive rinse" button ☹

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Spin speed" button ☹ (incl. "Rinse hold" ☹)

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If you select spin speed "0", the final spinning is cancelled, and the water is drained out only. However, intermediate spin phases remain during rinse.
- If you select **"Rinse hold"** ☹, the laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
 - Select **"Rinse hold"** if you want to postpone spinning to a later time or if you want to drain only.
 - The programme stops to "Rinse hold" when the "Rinse hold" ☹ light in the programme sequence indicator is on. The **"Start (Pause)"** button light blinks.

- To terminate the "Rinse hold" by draining the water, without any spinning, press the **"Start (Pause)"** button ▷||.
- To terminate the programme by spinning the laundry, press the "Spin speed" button to select the desired spin speed and then the **"Start (Pause)"** button ▷|| to start the spin cycle.
- Do not leave the laundry to soak in the rinse hold for too long.

START DELAY ☹

The "Start delay" ☹ allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the "Start delay".

- Select programme, temperature and options.
- Press the "Start delay" button to select a delay time up to 23 hours. The light of the **"Start (Pause)"** button ▷|| blinks.
- Press the **"Start (Pause)"** button ▷||. The countdown of the delay time begins. The light of the **"Start (Pause)"** button ▷|| is on. The light of the start delay button will keep blinking until the programme starts.
- As soon as the programme starts, the start delay on the display is replaced by the remaining programme time, and the light of the "Start delay" button goes off.
- Once having pressed the **"Start (Pause)"** button ▷||, the number of hours preselected can be changed by pressing and holding the "Start delay" button.

To cancel the "Start delay"

...before you press "Start (Pause)" ▷||:

- Turn the programme selector to another position, or briefly press the **"Reset/Drain"** button ☹/☹.

...after having pressed "Start (Pause)" ▷||:

- Press **"Start (Pause)"** ▷|| - the delay time disappears from the display. Press **"Start (Pause)"** ▷|| again to start the selected programme immediately.

PROGRAMME START ▷||

Open the tap and press **"Start (Pause)"** ▷||. The light stops blinking and is on. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the display.**

CHILD LOCK ☹

Activating the child lock prevents children from starting a wash cycle or changing the settings of a running programme. The child lock cannot be activated or deactivated when the programme selector is in the "Off/O" position. To activate the child lock:

- Turn the programme selector to a programme position, or run a programme as usual.
- Press the 2 buttons marked with the key symbol ☹ simultaneously for at least 3 seconds. A key-like symbol will shortly appear on the display to indicate that the child lock is active.

Any time you try to change a programme setting with active child lock, the display will briefly show the key-like symbol. The programme setting cannot be changed anymore. The only change possible is to switch the washer off by turning the programme selector to the "Off/O" position. To deactivate the child lock:

- Press again the 2 buttons marked with the key symbol ☹ simultaneously for at least 3 seconds.

SAVE YOUR FAVOURITE PROGRAMMES ♥

If there is a programme setting which you use frequently, the appliance offers the possibility to save one setting for each programme so that it can be used again by just pushing one button.

- Select the desired programme, temperature, spin speed and option(s), push and hold the **"Favourites"** button ♥ for at least 3 seconds. The **"Favourites"** indication ♥ briefly blinks and then lights up - the programme setting is saved.

Next time you want to use your individual programme setting, select the programme, push the **"Favourites"** button ♥ and start by pushing **"Start (Pause)"** ▷||.

If you want to replace the saved programme setting by another one, proceed as already described above.

"DOOR OPEN" INDICATION ☹

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Reset a running programme before the end".

FAILURE INDICATIONS ☹ ☹ ☹

If one of the failure indications lights up, refer to the "Troubleshooting Guide" in your "Instructions for Use".

PROGRAMME END

- The display shows "End" and the "Door open" indication ☹ lights.

1. Turn the programme selector to the "Off/O" position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press **"Start (Pause)"** ▷|| to pause the programme. The light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press **"Start (Pause)"** ▷|| again. The light is on, and the programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME BEFORE THE END ☹/☹

The **"Reset/Drain"** button ☹/☹ cancels a programme before the end.

- Press the **"Reset/Drain"** button ☹/☹ for at least 3 seconds. "rES" appears on the display. The water is drained out; it may last a while until you can open the door.

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06554